


WLIGHTKIT – Work Light Kit

Overview:

The **WLIGHTKIT** is designed as an option for the **WATERAX** Control Panel (**WCP**). Its function is to provide additional lighting over the pump and apparatus area. The **WLIGHTKIT** provides all the necessary components needed to make a complete work light installation. The Work Light included in this kit is a 27W High Efficiency LED Flood Light. This light floods a wide 130 degree beam pattern, sufficient to illuminate large work areas. The operating switch is typically installed in the Work Light control cut-out provided in the **WCP**. This document outlines the replacement parts and operations of the **WLIGHTKIT**.

Parts Breakdown:

The WLIGHTKIT is provided with mounting hardware wiring, and a toggle switch.

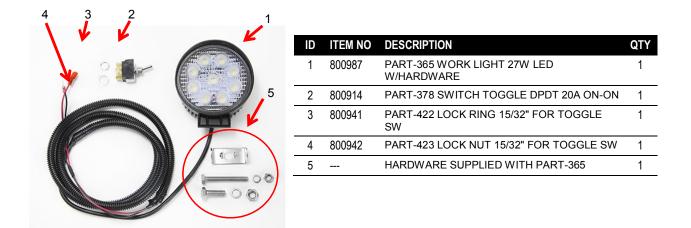

Installation:

For installation of the toggle switch and internal wiring, please refer to the WCP user instructions (DOCUIWCP).

Locate and drill 1 hole to securely fasten the work light to your vehicle. The work light mounting bolt is a 3/8"-16 X 1-1/4" LG. It is recommended that you place your LED work light away from heat sources to prevent damage and allow proper heat dissipation.

Operation:

To activate the Work Light:

- 1. Connect power to the WCP.
- 2. Turn on the WCP "POWER" switch.
- 3. Turn on the WCP "Work Light" switch.



USER INSTRUCTIONS

Warranty, Service and Support:

Product and service documentation such as tech notes, data sheets, manuals and information on the limited warranty provided on products manufactured by *WATERAX* can be found on our Web site at: www.waterax.com.

WATERAX Inc.

6635 Henri-Bourassa Blvd. W. Montreal, QC, H4R 1E1 Tel.: (855) 616-1818 (514) 637-1818 Fax: (514) 637-3985 E-mail: info@waterax.com

Copyright © 2015 WATERAX Inc. Publication Number: 700939, Rev.4 All rights reserved. Printed in Canada.