

STRIKER-4-DIESEL (STR4-DY10)



QUICK GUIDE

This Quick Guide shows the basic operation instructions and safety precautions for the *WATERAX* STRIKER-DIESEL high pressure pump.

- The *WATERAX* STR4-DY10 pairs a *WATERAX* 4-stage pump end with a Yanmar L100 diesel-powered engine.
- For full specifications and performance curves, see the *STRIKER-4-DIESEL Data Sheet*.



Warnings and Safety Precautions

This warning label appears on the STR4-DY10 pump to identify safety hazards as follows:



Read Your Owner's Manual

The improper use of this pump could result in serious injuries as well as damage to the unit. Read the *Owner's Manual* before using your pump unit and follow the safety instructions in this Quick Guide. It contains very important safety information that **MUST** be read, understood and followed to safeguard you and your equipment from harm and damage. **This pump must only be operated by trained personnel.**



Warnings

- Do not operate if mentally or physically fatigued.
- Always inspect hoses and piping to avoid burst injuries.
- No modification and/or alteration may be made to the pump. Any such modifications void the pump warranty and can endanger pump operators.
- Do not operate the pump above the maximum rated pressure of 400 psi (27.6 bar). Use only pipe, hose, and fittings rated at or above the max. pressure ratings of the pump or system design. Ensure special precautions during tandem pumping and progressive hose lays.
- Max. allowable pump intake pressure: 200 psi (13.8 bar)
- Use slow close valves wherever possible to safeguard operators and prevent damage from water hammer.
- Ensure sufficient lighting (5 lx min.) during operation.
- Dry weight of the unit: 160 - 205 lbs (72.6 - 93.4 kg).
- Dimensions: Refer to data sheet.



Always wear eye and ear protection when operating the pump unit. Sound level of the unit: 92 dB(A).



Never run the engine in a closed or confined area. Exhaust gas contains carbon monoxide which is poisonous. Avoid inhalation of exhaust gas.



Refuel engine with care. Gasoline is extremely flammable, and gasoline vapor can explode. Refuel in a well-ventilated area, with the engine stopped. Use only fuel and oil type as recommended.



Never touch any exhaust system parts while engine is running. Always allow enough time, after stopping the unit, for proper cooling of these parts and surrounding areas. Wear protective gloves.


Preventing Damage to Equipment

- Flush the pump with fresh water if the pump has been used to pump salty, brackish, high mineral content water, water containing debris, or foam injected water. Check that debris is cleared before using the pump again.
- Always draft water using a suction strainer.

QUICK GUIDE

Parts Identification

- A. Fuel filter
- B. Engine feed pump
- C. Sleeve compression fitting (not shown)
- D. Nut compression*
- E. Fitting compression*
- F. Digital Control Panel**
- G. Engine Mount Control Panel***
- H. Pump intake/suction (NPT)
- I. Pump drain port (not shown)
- J. Pump discharge (NPT)
- K. Quick release pump clamp
- L. Oil pressure switch (not shown)
- M. Guzzler hand primer
- N. Throttle linear actuator*
- O. Electrical starter
- P. Rewind starter
- Q. Muffler
- R. Air filter

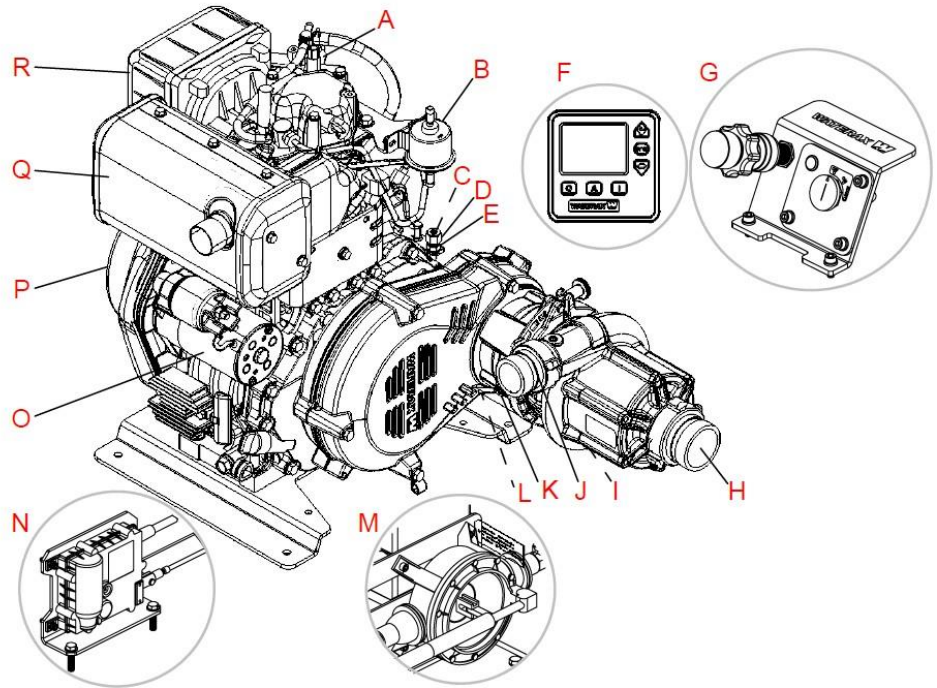

* Is sold separately with the THROTTLE LINEAR ACTUATOR FOR DCP kit.

**Please refer to your DCP User Instructions for installation and operating instructions.

***Mounted on the Portable model.

To operate the STR4-DY10:

1. Supply recommended DIESEL fuel to engine.

Do not mix gasoline or alcohol with diesel fuel.

- a. For models with an integral fuel tank, fill tank and securely replace cap. Always refuel with care.
- b. For models without an integral fuel tank, fill external fuel tank and connect fuel supply line to the fuel filter according to the engine manufacturer's instructions. Pump fuel to fill supply line.

2. Check oil level (see engine manual) and top off if necessary.

3. Connect the suction hose. Use universal hose coupling wrench to tighten coupling firmly.

Drafting mode: Connect foot valve strainer to male end of suction hose, then fill suction hose with water and connect to pump intake.

Flooded Suction Mode: Connect female end of suction hose to pump intake and connect male end to hydrant or other supply


- a. Slowly open the pump inlet valves allowing the water into the pump body.
- b. Slowly open the discharge valves and priming valves to allow for entrapped air in the piping to escape.
- c. Once all the air has escaped, slowly close any opened discharge valves so that the unit may be started.

! **DO NOT** run engine with pump disconnected.

! **DO NOT** run pump when dry.

! **DO NOT** allow foot valve strainer to rest on bottom of lake or riverbed. Check strainer frequently to make sure that it is not clogged with moss, leaves, etc.

! **DO NOT** lift strainer from water while the pump is operating. Use a rope or other means to keep strainer at proper height, approximately 1 foot (30 cm) below water surface. If strainer is too close to the water surface, it will draw air and pump may lose prime.

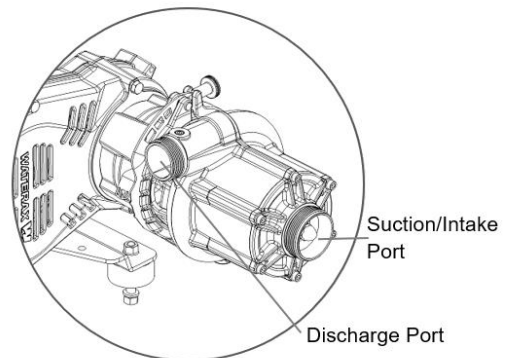

QUICK GUIDE

4. **Connect the discharge hose, nozzles, etc., to pump**, and tighten firmly with coupling wrench.

5. **Prime the pump.**

Check that all drains, discharge valves, or any auxiliary valves are closed before priming the pump. Open the priming ball valve (located between the pump and the primer) and prime the pump using primer. **Close the priming ball valve after priming.** Failure to close the priming valve could cause the pump to lose prime or water to be pumped through the priming system.

6. **Start the engine.**

- Close all discharge valves.
- Open fuel valve.
- For DCP, press the 'A' button to activate the panel. A green led on the bottom right will light up indicating that the panel is powered and ready to start.

For Engine Mount Control Panel, set the key switch to "ON".

- For DCP, press and hold the 'I' (Run) button to start the engine. **DO NOT HOLD** for more than 5 seconds.

For Engine Mount Control Panel, turn the key switch to "Start" until engine starts.

- Allow the engine to warm up for a minimum of 2 minutes before using full throttle.


Refer to the Digital Control Panel User Instructions for detailed installation and operation instructions.

7. **Discharge water.**


Once the pump is primed, and with the engine running, you can begin to discharge water.

- Slowly open the discharge valve. If pressure does not build in the discharge hose, the pump has not been fully primed. Prime the pump again.
- Adjust the pump performance by throttling the engine up or down, or opening or closing discharge valves at various positions, or any combination of the two.
- The LOW-PRESSURE PROTECTION will automatically activate after 5 seconds. If pressure drops below 7 psi (loss of prime condition), the engine will automatically shut down to protect the pump.

! **DO NOT** leave the pump running with all the discharge valves closed for more than one minute, or else the pump may overheat and become damaged. Additionally, the pump end and the water inside it can become extremely hot and cause severe burns. **Careful when opening the discharge valve and avoid touching the pump end.** To avoid this, a re-circulation line (if provided) should be opened or a discharge line left slightly open to allow fresh water to continue to enter the pump.

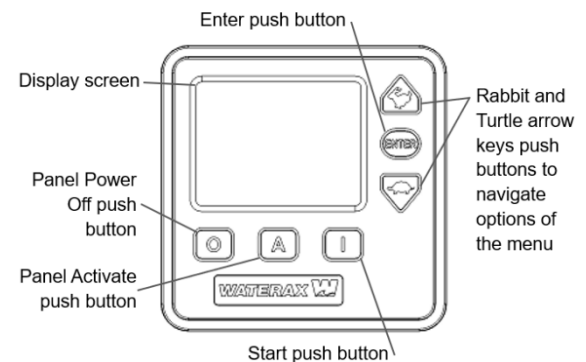

WATERAX Digital Control Panel (DCP)

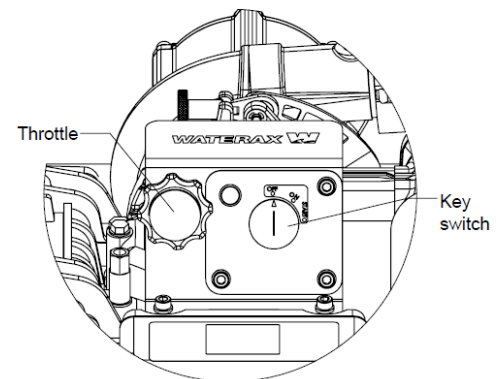

WATERAX Engine Mount Control Panel

To shut down and store the STR4-DY10:

8. Shut down the pump.

- Gradually reduce the engine speed.
- Whenever the unit has been run at full throttle for most of the operation, allow the valves to remain slightly open and run the engine at idle for approximately 5 minutes before shutting down the unit.
- Turn off engine by pressing the “O” button on the controller or turn the key switch to “off” on the Engine Mount Control Panel.
- Close off the hydrant/supply to the pump.
- Open all valves to relieve any pressure left in the system.

9. After final use.

- a. If the pump was last run with foam or water that is salty, brackish or high in mineral content, flush the pump with fresh water for a minimum of 2 minutes or until water is clear. Clean the carburetor.
- b. After the unit has cooled down, check all fluid levels and add as needed.
- c. Completely drain the pump of all water.
- d. Break down and store all equipment as outlined by the apparatus or department procedures.
- e. Visually inspect the pump end. Clean any dirt or debris from the pump unit. If necessary, a mild soap and water solution can be used. Note and report any performance irregularities or any abnormal mechanical sounds.
- f. Close all valves and plug all openings.
- g. Follow any other product, component, apparatus, and departmental procedures and/or guidelines before placing the unit in storage. Make sure all necessary tools, spares, and accessories are with the pump.

To operate the STR4-DY10 in cold weather:

- The pump can be run in below freezing temperatures if certain precautions are taken to avoid the formation of ice in the pump.
- After priming the pump, the unit should be run at low speed for a short period of time to allow all components to warm up before continuing with the remaining operating procedures.
- Unless wrapped in a heater, drain the pump of all water if it is stopped for any length of time. The engine/drive unit should be turned over a few revolutions to make sure all water has been removed from the pump. Drain the pump priming line if a primer has been used.
- After use, drain the pump, manifolds, and lines of all water. You can also pour some RV antifreeze into the pump and circulate it through the pump and plumbing system.

Warranty, Service and Support

Product and service documentation such as tech notes, data sheets, manuals and information on the limited warranty provided on products manufactured by **WATERAX** can be found on our Web site at: www.waterax.com

WATERAX

All information contained in this document including drawings is proprietary to *WATERAX* and may not be copied, reproduced or used in whole or in part without our prior written permission. The information in this document is subject to change without notice. Model displayed with multiple options. Weight and dimensions are approximated and may vary depending on options.

WATERAX INC.
6635 Henri-Bourassa W.
Montreal, QC H4R 1E1
T 514 637-1818
F 514 637-3985
TF 1 855 616-1818
info@waterax.com

waterax.com

To help you stay **#ReadyForWildfires**, we've made a few changes, placing 100% of our focus on manufacturing our core products, portable fire pumps.

To do so, we've established a network of trusted supply and distribution partners that can help us provide *WATERAX* pumps quickly in addition to water-handling equipment and accessories.

For immediate assistance when it comes to pumps and water-handling accessories, please [contact your local dealer](#).

For genuine spare parts, visit our [online store](#).

Copyright © 2025 WATERAX Inc.

Publication Number: 702300, Rev.3 All rights reserved. Printed in Canada.

